




RUNAWAY BAY
MARINA

How to use the Holding Tank Waste Pump out Station

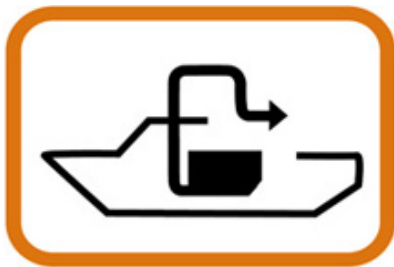

To use:


1. Read warnings
2. Fit adapter into waste connection point on board
3. Lift hose from stand



4. Connect hose to adapter,
5. Push handle down on nozzle to start pump out



6. Monitor flow of waste by sighting clear section of hose

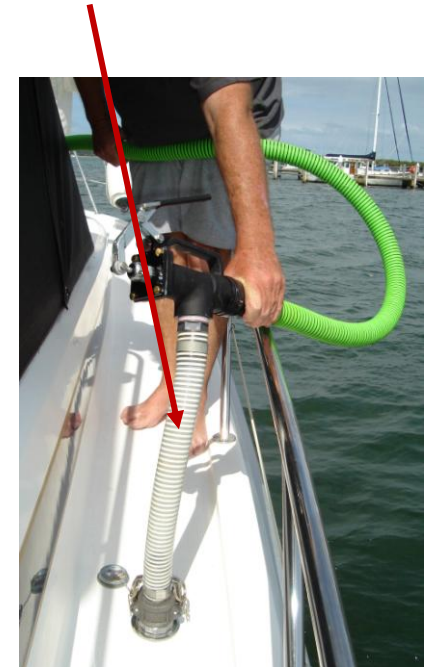

7. When flow stops release handle.
8. Disconnect hose
9. Return hose to stand

WARNINGS

Before attempting pump out you must be aware of the following:

1. Station is For Holding Tank Waste removal only, and is never to be used for pumping bilge water or fuel
2. Confirm your holding tank is properly vented – the pump creates a strong vacuum air must be able to get into tank to replace waste removed otherwise holding tank may collapse, the manufacturer recommends a ventilation pipe of at least 15mm internal diameter.
3. Obtain an adapter that fits your on board fitting to connect to the pump out hose – the pump out hose ends with a female 40mm Camlock connection, so one side of your adapter will need a male 40mm camlock fitting.
4. Call Marina Office (5577 1400 – Office hours) to confirm the pump is operational

When using pump out:

Beware a Powerful vacuum is created at the end of the hose whenever the handle is depressed – NEVER expose end of hose to body parts as serious injury may result.



In the event nozzle clogs or becomes obstructed close valve in cabinet to break vacuum and advise Marina Office (Ph 5577 1400)



Valve Open



Valve Closed



A selection of adapters – to connect adapter to pump out a male 40mm camlock fitting is required